


Godox



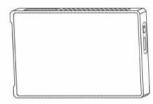



深圳市神牛攝影器材有限公司

地址 深圳市宝安区福海街道塘尾社区藤川工业区厂房2栋 电话。0755-29609320(8062) 传真:0755-25723423 邮箱:godox@godox.com

GODOX Photo Equipment Co.,Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhal Street, Bao'an District, Shenzhen \$18103, China Tei: +86-755-29609320 (8062) Fax: +85-755-25723423 Email: godox@godox.com

www.godox.com

Made in China | 705-05R000-00



C5R

RGB 影视创意灯

KNOWLED RGB CREATIVE LIGHT

说明手册

Instruction Manual



Safety Instructions and Attentions

First of all, as the most basic principle. This product is a professional lighting set equipment and should be used by professional lighting engineers or under the guidance of professionals. Basic safety attentions must always be followed during use, as follows:

- Before use, please read and understand these instructions and attentions
- Professional lighting is prohibited for children. When children are near, parents or accompanying persons must supervise closely to prevent children from personal injury due to collision with lamps or private use of lamps.
- This lighting product is not ordinary lighting product and cannot be used for general lighting. Anyone who has suffered eye damage or has sensitive eyes should avoid using this product.
- When the lamp is on, it must be used with care. Do not touch high-temperature parts, such as LED lamp beads, to avoid burns.
- 5. When the lamp is on, it is forbidden to look directly at the lamp beads under any circumstances. Strong light should be used under the guidance of professional lighting engineers. Avoid prolonged exposure to strong light under any circumstances, if eye discomfort, please turn off the lamp in time. suspend use and see a doctor immediately.
- If the lamp bead is damaged or deformed by heat, stop using this equipment, and contact the manufacturer, service agent or qualified maintenance personnel to replace the lamp bead in time to avoid accidents.
- This product is only suitable for use in -10°C to 40°C operating environment and normal humidity environment.
- Do not use damaged equipment or accessories, and walt for professional maintenance personnel to check and repair to confirm being normal before use.
- During using, if the casing of this product is broken due to being dropped, squeezed or subjected to strong impact, please do not use it, so as to avoid electric shock injury due to contact with internal electronic components.
- 10. If an extension cord is required, please use an extension cord with a current rating greater than or equal to that of the equipment. If an extension cord is rated less than the equipment, overheating may result.

09

- 11. Some products have long power cords, please place the power cords properly and keep them in a safe place. Avoid contacting the power cord with overheating surfaces, avoid improper placement that could cause pulling damage, or trip on-site personnel. Please use the certified power cord from the original manufacturer. If the product is damaged by using a non-certified power cord, it will not be reaaired by our factory.
- 12. Be sure to unplug equipment from the power outlet before cleaning and repairing. When not in use, do not pull the power cord to unplug the equipment. For normal power-off, please hold both ends of the plug of the equipment with your hands and pull the plug out of power outlet. This equipment needs to be connected to a grounded outlet.
- 13. This equipment is not waterproof, please keep it dry and do not immerse it in water or other liquids. The equipment should be installed in a dry and ventilated place, and avoid using it in rainy, humid, dusty or overheated environments. Do not place any objects on the lamp or let liquid flow into the lamp to avoid accidents.
- Do not disassemble the product without permission. If the product fails, it must be checked and repaired by authorized maintenance personnel.
- 15. Before storing, make sure that the equipment has cooled down completely. For storage, unplug the power cord from the equipment. The equipment should be placed in the carrying case or in a ventilated dry place.
- Do not place equipment near flammable and volatile solvents such as alcohol and gasoline.
- Do not use accessories that are not recommended by our factory to avoid fire, electric shock or personal injury.
- 18. When cleaning, do not wipe it with a damp cloth, please use a dry cloth or a soft cloth to wipe the dirt of the equipment.
- 19. Please take off the protective cover before using.
- This product complies with ROHS, CE, KC and FCC certification, please refer to the relevant national standards for use and operation.
- 21. The safety instructions are formulated according to the strict testing of the factory, and the design and specifications of the equipment are subject to change without prior notice. For latest product information, please check the GODOX website and view latest electronic instruction.



- 22. Some products have builtin lithium batteries. Please use specified chargers, and use them within a proper range of the specified voltage and temperature according to the correct operating instructions.
- 23. Some products are battery powered. Do not use any batteries, power sources or accessories not specified in the instructions for such products. Keep batteries and other accessories out of the reach of children and infants. In the instance that a child or infant swallows a battery or accessory, immediate emergency medical attention is required. If the battery leaks, becomes discolored, deformed, emits smoke, or emits an abnormal odor, remove it immediately. Be careful during removal to avoid burns. Continued use could result in fire, electric shock, or burns. Do not use any deformed or modified batteries. Do not disassemble or modify this product or battery. Do not heat or solder the battery. Keep the battery away from fire or water. Do not incorrectly insert the positive and negative ends of batteries, or mix old and new batteries or batteries of different types together.
- One-year warranty period, accessories such as consumable batteries, adapters, power cords, etc. are not covered by this warranty.
- 25. If it is found that the equipment is repaired without authorization, the one-year warranty period will be cancelled and relevant fees will be charged for maintenance.
- Machine failures caused by non-standard operation are not covered by the warranty.

keep these instructions!

Foreword

Thank you for purchasing!

Knowled RGB Creative Light C5R is featured with: highlight LED beads, wide CCT range, stepless adjustable brightness, bi-color temperature mode, HSI mode, FX mode, compact and portable, etc. Bluetooth APP wireless control enables remote control of C5R by mobile device. It supports USB Type-C charging and wireless charging (compatible with most wireless chargers), C5R is quite suitable for light filling, outdoor shooting, background light creating, painting shooting, etc.

Main Features


- Support USB Type-C charging/wireless charging, and wireless charging for other mobile devices
- · Compact and portable, lightweight of only 169g
- Built-in CCT/HSI/FX mode, up to 36000 colors with CRI 96+
- Magnetic design on the back, mountable to metal surface
- Cold and warm color temperature, precisely adjustable from 2500K to 8500K
- · 39 simulated light effects to create various scenes
- 3000mAh built-in lithium battery works continuously for 2 hours in 100% brightness
- · Bluetooth APP control, simple and convenient operation
- · CRI≥96, TLCI≥96, restore the original color

Warning

- ⚠ Keep out of reach of children.
- Do not disassemble. Should repairs become necessary, this product
 must be sent to an authorized maintenance center.
- ♠ Do not use the flash unit in the presence of flammable gases, chemicals and other similar materials. In certain circumstance, please pay attention to the relevant warnings.
- ⚠ Built-in lithium battery, do not disassemble, impact, squeeze or put it into fire. If serious bulge occurs, please do not use.
- \triangle Do not leave or store the product if the ambient temperature reads over 40 ${\rm C}$.
- ⚠ Please use the proper charger and follow the operation instruction.



Name of Parts

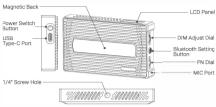

Included Items



Battery

- 1. Built-in lithium battery is not detachable and has long run time.
- It is reliably safe. The inner circuit is against overcharge, over-discharge, over current, and short circuit.
- It takes only 2 hours to fully charge the battery by using the standard 5V/2A battery charger (optional).

Charging

1. Type-C Charging

When charging in power on status, the battery indicator increases with flash, while charging in power off status, the LCD panel will only display the battery indicator which increases with flash. The battery indicator will be filled after fully charged.



2.Wireless Charging

With a built-in wireless charging module, this product can be wirelessly charged by placing the back on the wireless charging board.

Tip: Please properly place with the wireless charging area on the back in order to improve charging efficiency.

Operation Instruction

1.Power Switch

Long press the power switch button for 1 second to turn on or off the device.

2.Brightness Adjustment

Turn the DIM adjust dial to adjust brightness from 0% to 100%. Turn it towards "-" to decrease the brightness while "+" to increase the brightness, with 1% of increment.

3. Mode Switch: CCT/HSI/FX Mode

Short press Bluetooth setting button to switch among the following modes:



When the LCD panel displays "CCT", it's bi-color temperature mode.



When the LCD panel displays "HSI", it's HSI mode,



When the LCD panel displays "FX", it's FX mode.



3.1 CCT Mode

Switch to bi-color temperature mode, turn the FN dial to adjust the color temperature from 2500K to 8500K. Slide up to increase while slide down to decrease with 100K increment of the color temperature value each slide. Press and push the FN dial upwards can increase CCT to 8500K quickly, while press and push downwards can decrease CCT to 2500K quickly.

3.2 HSI Mode

Switch to HSI mode, short press the FN dial to select Hue (H) or Saturation(S). Select the hue H, turn the FN dial to adjust the hue value from 0°T on 360°. Side up to increase with is elide down to decrease with 1° increment of the hue value each slide. Select the saturation (S), turn the FN dial to adjust the saturation value from 0 to 100. Slide up to increase while slide down to decrease with 1 increment of the saturation value each slide.

Note: Press and push the FN dial upwards or downwards can achieve quick adjustment.

3.3 FX Mode

Switch to FX mode, turn the FN dial to adjust light effect, slide up or down to switch at normal speed, press and push upwards or downwards to switch at fast speed.

Users can choose among the following of 39 light effects in FX mode:

FX Light Effects Form (39 kinds within 14 types)

NO.	Display	Scenes	Display I	Display II	Display III
1	Ф	RGB Recycle	Slow speed	Medium speed	Quick speed
2	**	Flash	Flash	Press conference	Paparazzi
3		Laser	Birthday Party	KTV	Disco
4	4	Lightning	Discontinuous	Frequent	Sustainable
5	9	Broken Bulb	Discontinuous	Frequent	Sustainable
6	ŤŸ	TV	Slow speed	Medium speed	Quick speed
7	Ô	Candle	Discontinuous	Frequent	Sustainable
8	*	Fire	Firewood	Campfire	Fire Hazard
9	**	Firework	Short	Continuous	Performance
10	~	Police Car	Storm	Stroboflash	Quick flash
11	66	Fire Truck	Storm	Stroboflash	Quick flash
12	<u> </u>	Ambulance	Storm	Stroboflash	Quick flash
13	F	Music	Mode 1	Mode 2	
14	SOS	SOS			



Bluetooth mode

Long press the Bluetooth setting button for 1 second to enter Bluetooth mode. Turn the FN dial to choose Bluetooth switch (ON/OFF) or Bluetooth reset (RESET), then short press the FN dial to turn on, turn off or reset the Bluetooth.

Scan the following QR code to download "GodoxLight" mobile APP (both Android and IOS systems are available). When "Reset" displays on the LCD panel, the Bluetooth is being reset.



For specific operations, please referto the "Help" manual of the mobile APP, which contains detailed instruction.

Note: the APP can be used directly on the firstly installed device (smartphone or tablet). When changing to other mobile devices, the light shall be reset before normal usage of APP.

Technical Data

Model	C5R
Lithium Battery	3.8V/3000mAh
Power	5W
USB Charging Input	5V 2A
Wireless Charging Input	5V 1A
CCT Range	2500K~8500K
CRI≈	96
TLCI≈	97

Illuminance Data in CCT 6500K	2200lux/200fc (0.98 feet/0.3m)	
	770lux/77fc (1.64feet/0.5m)	
	200lux/18fc (3.28 feet/1m)	
Brightness Range	0%-100%	
Wireless Charging Time≈	2.5 hours	
USB Charging Time≈	2 hours	
Battery Life (100% Brightness)	2 hours	
Controlling Method	Bluetooth APP	
Working Environment	Humidity: 20%-90% , Temperature: -10 C~40 C	
Dimension	106*66*18mm	
	4.2 *2.6 *0.7 inches	
Net weight ≈	169g	
	5.96oz	

Product design and specifications are subject to change without noti ce.

Maintenance

This product, except consumables e.g. cable and coldshoe, is supported with a one-year warranty.

Maintenance of the product must be performed by our authorized maintenance department which can provide original accessories.

Unauthorized service will void the warranty.

Changes made to the specifications or designs may not be reflected in this manual



Declaration of Conformity

GODOX Photo Equipment Co., Ltd., hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link:

https://www.godox.com/eu-declaration-of-conformity/

The device complies with BE specifications when the device used at 0mm from your body.

Warning

Operating frequency:2402MHz - 2480MHz Maximum EIRP Power 6 39dBm

FCC statement

This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions: (1) This device may not cause harmful interference. and (2) this device must accept any interference received, including interference that may cause undesired operation,

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the ECC Bules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

产品保修

尊敬的用户, 本保修卡是申请保修服务的重要凭证, 请您配合销售商道写并妥 美伊等 油油1

告 休日, 別	931:		
产品信息	<u></u> 型号	产品条码	
用户信息	姓名	联系电话	
	通信地址		
销售商	名称		
信息	联系电话		
	通信地址		
	销售日期		
备注			

注: 此表应由销售商盖音确认。

本文件适用干相关《产品保修信息》(见后面说明)所列产品,其他非属此范围的 产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次 购买日起算,购买日以购买产品时保修卡登记日期为准。

您可直接与产品销售商或授权服务机构联系,也可拨打神牛产品售后服务电 话,与我们联系,由我们的服务人员为您安排服务。申请保修时,您应提供有效 的保修卡作为保修凭证,方可获得保修。如您不能提供有效的保修卡,则在我 们确认产品或部件属于保修范围的情况下,也可以为您提供保修,但这不作为 我们的义务。



不适用保修的情况

如产品存在下列情况。本文件项下的保证和服务将不适用 ①产品或部件超过相应保修期;②错谋或不适当使用、维护或保管导致的放障或损坏,如:不当搬运;非按产品合理预期用途使用;不当捕拨外接设备;跌落或外力挤压;接触或离器于不适当温度、溶剂,酸碱、水浸或潮湿环境;③由非神牛授权机构或人员安装、修理,更改、添加或拆卸造成的故障或损坏;④产品或部件原有识别信息被修改变更或除去;⑤无有效保修卡;⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏;①因不可抗力或意外事件造成的故障或损坏;①因不可抗力或意外事件造成的故障或损坏;①因不可抗力或意外事件造成的故障或损坏;⑥其世非因产品本身质量问题导致的故障或损坏,或上述情况。您应向相关责任方寻求解决,神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的,不是保修范围内的故障。产品使用过程中正常的脱色、磨损和消耗,不是保修范围内的防障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行:

产品类别	选件名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器等带电性能的部件。	12	客户送修
其他	如闪光管、造型灯泡、外壳、 保护罩、锁紧装置、包装等。	无	无保修

神牛产品售后服务电话:0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it Thank you!

Product Information	Model	Product Code Number	
Customer Information	Name	Contact Number	
	Address		
Seller Information	Name		
	Contact Number		
	Address		
	Date of Sale		
Note:			

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time, And the purchase date is considered as the date registered on the warranty card when buving the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: (1). The product or accessory has expired its warranty period; (2). Breakage or damage caused by inappropriate usage, maintenance or preservation. such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; (3), Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; (4). The original identifying information of product or accessory is modified, alternated, or removed; (5). No valid warranty card; (6). Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; (7). Breakage or damage caused by force maieure or accident; (8). Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration. abrasion and consumption are not the breakage within the maintenance scope

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following **Product Maintenance Information:**

Product Type	Name	Maintenance Period(month)	Warranty Service Type	
Parts	Circuit Board	12	Customer sends	
	Battery	3	the product to designated site	
	Electrical parts e.g battery charger,etc	12		
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, etc.	NO	Without warranty	

Godox After-sale Service Call 0755-29609320-8062

